

ケーブル	メーカー	対応カメラ
MIOPS-C-C1	canon	EOS 10D, EOS 1D, EOS 1D C, EOS 1D mk II, EOS 1D mk II N, EOS 1D mk III, EOS 1D mk IV, EOS 1D X, EOS 1Ds, EOS 1Ds mk II, EOS 1Ds mk III, EOS 20D, EOS 20Da, EOS 30D, EOS 40D, EOS 50D, EOS 5D, EOS 5D mk II, EOS 5D mk III, EOS 6D, EOS 7D, EOS D30, and EOS D60, EOS 7D mk II , EOS 5DSR, EOS5DS, EOS 8000D,EOS 1DX mk II , EOS80D, EOS 5D mk IV
MIOPS-C-C2	canon	EOS 60D, EOS 70D, Kiss Digital, Kiss F Digital, Kiss N, Kiss X2, Kiss X2, Kiss X3, Kiss X4, Kiss X5, Kiss X50, Kiss X6, PowerShot G1 X, PowerShot G10, PowerShot G11, PowerShot G12, PowerShot G15, PowerShot G16, PowerShot SX50 HS, Kiss X7, Kiss X70, Kiss X7i, EOS 8000D,kiss X8i, kiss X80, Kiss X9i, EOS 9000D, EOS M2, EOS M3, EOS M5, EOS M6,
	FUJIFILM	X-E1,X-E2
	HASSELBLAD	H, H3D, H4D-200MS, H4D-31, H4D-40, H4D-50, H4D-50MS, H4D-60
	SAMSUNG	GX-1L, GX-1S, GX-20, NX-10, NX-100, NX-11, and NX-5
	PENTAX	645D, 645Z, ist D, ist DL, ist DL2, ist DS, ist DS2, K-3, K-30, K-5, K-5 II, K-5 IIs, K-50, K-500, K-7, K10 Grand Prix, K100D, K100D Super, K10D, K110D, K200D, K20D, MZ-6, MZ-L, and ZX-L, K-S2, K-3 II, K-70, K-1, KP
MIOPS-C-N1	NIKON	D1, D100, D1H, D1X, D2, D200, D2H, D2HS, D2X, D2XS, D3, D300, D300S, D3s, D3X, D4, D4s, D700, D800, D800E, D810, D5, D500
MIOPS-C-N2	NIKON	D70S, D80
MIOPS-C-N3	NIKON	Coolpix P7800, D3100, D3200, D5000, D5100, D5200, D5300, D600, D610, D750, D7000, D7100, D90, D3300, and Df, D7200, D5600, D3400, D7500
	FUJIFILM	S3 Pro, S5 Pro
MIOPS-C-S1	MINOLTA	DiMAGE 5, DiMAGE 7, DiMAGE 7Hi, DiMAGE 7i, DiMAGE A1, DiMAGE A2, DiMAGE A200, Dynax 3, Dynax 4, Dynax 5000, Dynax 500si, Dynax 505si, Dynax 5D, Dynax 7, Dynax 7000, Dynax 7D, Dynax 9, Dynax 9000, Dynax Sweets, Maxxum 3, Maxxum 4, Maxxum 5000, Maxxum 500si, Maxxum 505si, Maxxum 5D, Maxxum 600si, Maxxum 7, Maxxum 7000, Maxxum 700si, Maxxum 7D, Maxxum 807si, Maxxum 9, Maxxum 9000
	HASSELBLAD	HV
	SONY	A100, A200, A300, A33, A35, A350, A37, A400, A450, A500, A55, A550, A550V, A560, A57, A580, A65, A65V, A700, A77, A77V, A77 II , A850, A900, A99, A99 II
MIOPS-C-S2	SONY	A58, A6000, A7, A77 II , A7R, A7S, HX300, HX50V, NEX 3N, RX100 II, RX100 III, and 5000L, A7 II, A7R II, A7S II, A6300, A6500, A9
MIOPS-C-SA1	SAMSUNG	EX2F, Galaxy NX, NX1000, NX1100, NX20, NX2000, NX210, NX300, NX Mini
MIOPS-C-P1	PANASONIC	Ft 2, FZ100, FZ15, FZ150, FZ20, FZ200, FZ30, FZ50, G1, G10, G2, G3, G5, G7, GF1, GH1, GH2, GH3, GH4, GX1, GX7, GX8, L1, L10, LC1, TS2, and G6, GH5
MIOPS-C-F1	FUJIFILM	Finepix S1, X-A1, X-M1, X-T1, and XQ1, X-A2, X-A3, X-T10, X-Pro2 , X-T2, X-T20, GFX 50S
MIOPS-C-O1	OLYMPUS	E-30, E-400, E-410, E-420, E-450, E-510, E-520, E-600, E-620, Evolt E-410, Evolt E-510, OM-D E-M1, OM-D E-M5, OM-D E-M10, PEN E-P1, PEN E-P2, PEN E-P3, PEN E-P5, PEN E-PL2, PEN E-PL3, PEN E-PL5, PEN E-PL6 , PEN E-PL7, PEN E-PL8, PEN E-PM1, PEN E-PM2, SP-550, SP-560, SP-570, SP-590UZ, Stylus 1, XZ-1, XZ-2, and XZ-2 iHS, E-M5MarkII, OM-D E-M10 MarkII, PEN-F, E-M1MarkII